


MOUNT BREAKERS AND GROUND BARS TO MOUNTING PANEL

MAIN BREAKER NOT SHOWN FOR CLARITY. INSTALL AS PER MANUFACTURES INSTRUCTIONS

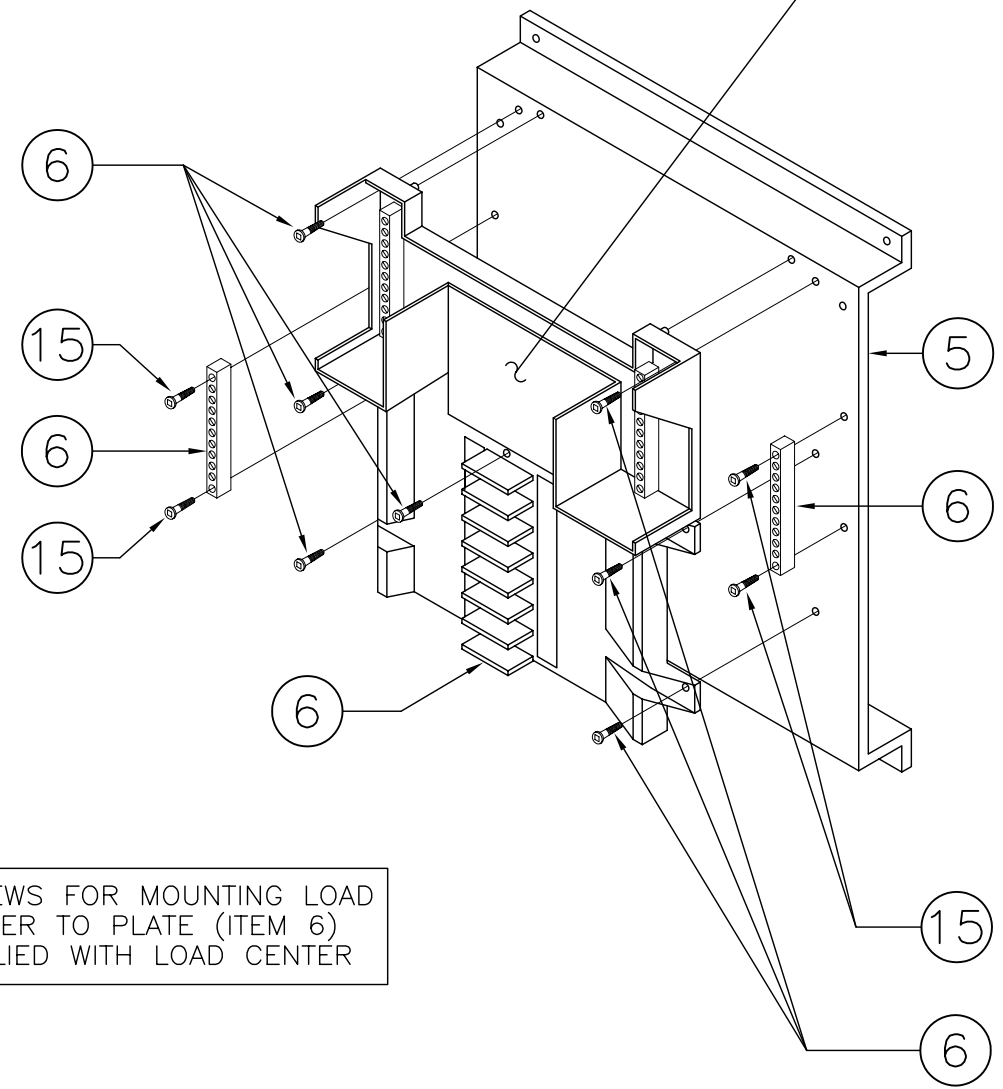

8 SCREWS FOR MOUNTING LOAD CENTER TO PLATE (ITEM 6) SUPPLIED WITH LOAD CENTER

ASSEMBLY VIEW

SEE DRAWING MS401.1 FOR NOTES

NOT TO SCALE

100A-120/240V SERVICE/DISTRIBUTION PANEL DETAILS