

EXTENT OF FIRE - XF

Extent of Fire is the actual extent of burning or charring and does NOT include browning or blistering of paint or damage from smoke which is covered under Extent of Damage.

- 1000 Confined to object of origin
- 2000 Confined to part of room/area of origin
- 3000 Confined to room of origin
- 4000 Confined to floor level of origin
- 5000 Confined to building of origin
- 6000 Extended beyond property of origin
- 7000 Confined to roof/attic space