

WELL DRILLING ADVISORY

Flowing artesian conditions


Westwold, BC



Flowing artesian conditions exist in the Westwold Valley area, BC. Well drillers and home owners should be aware of potential complications and costs of flowing artesian wells.

What is a flowing artesian well?

Flowing artesian wells occur when a well is drilled into an aquifer under pressure that is high enough to force the water level in the well to rise above the ground surface and flow over the top of the well (Figure 2). It is important to properly construct the well to control this flow. Controlling artesian flow conserves groundwater resources, preserves the pressure within the aquifer, and prevents damage to the natural environment (i.e., property damage, flooding, erosion and impacts to surface water). A flowing artesian well can cause substantial damage and incur significant and unexpected costs if not carefully planned and constructed. Well drillers and well owners should be prepared in advance in case flowing artesian conditions are encountered.

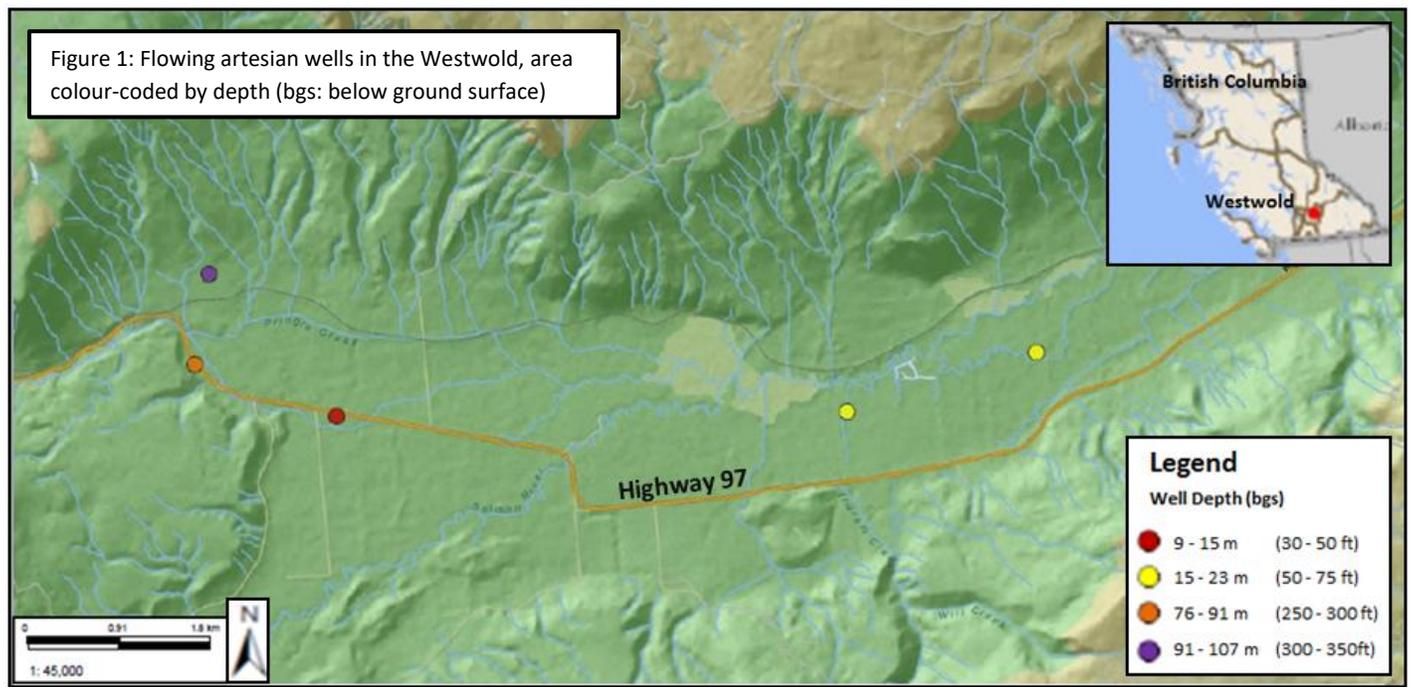

Where do artesian conditions occur?

Westwold is an area of known flowing artesian conditions. The area is located between Kamloops and Vernon, on Highway 97 (Figure 1). Please note that artesian conditions may extend beyond the boundaries of the mapped area below.

Why are there flowing wells in the Westwold Valley area?

The surficial geology in the Westwold Valley includes clay and till deposits interspersed with sand and gravel formations that comprise the aquifers in the area. As these aquifers are confined by materials that are poor transmitters of water (see Figure 2: confining bed), the aquifer likely receives recharge from areas of high relief surrounding the Westwold Valley. The combination of confining beds with a high elevation of the recharge source causes the aquifer systems to be under confined pressure, which can cause groundwater to naturally rise in a well without the aid of a pump. A well drilled into a confined aquifer has the potential to become a flowing artesian well, where groundwater rises through the well above the land surface (see Figure 2: flowing artesian well).

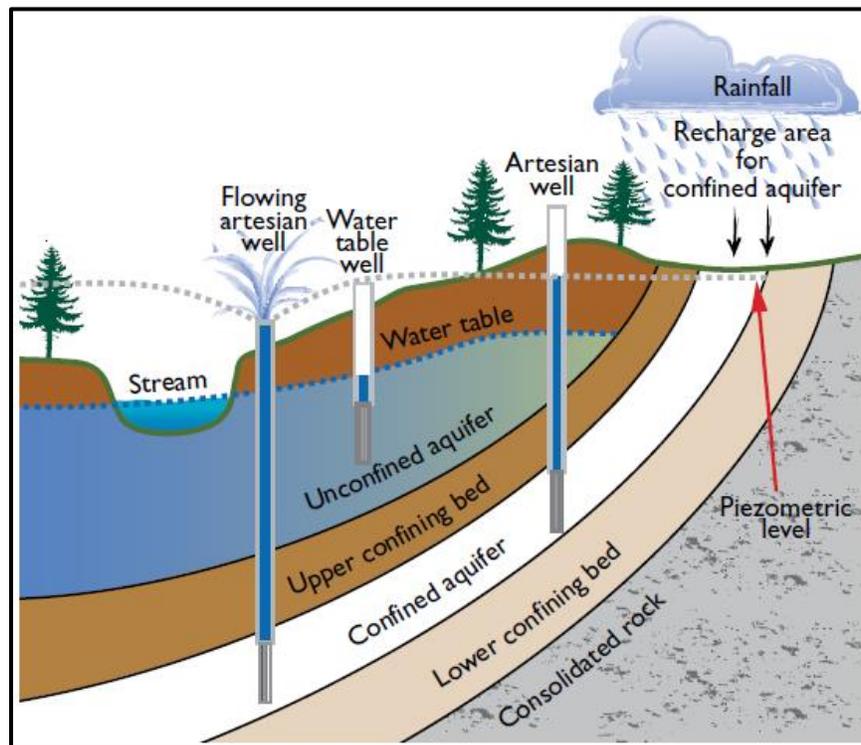


Figure 2: Generalized rendering of the geologic and topographical controls affecting artesian and flowing artesian wells. Water enters exposed portions of an inclined aquifer at high elevation and percolates down through interconnected pore spaces. Because the aquifer is sandwiched between layers of rock or overburden that inhibit water flow (confining beds, bedrock), the water held in the aquifer is under artesian pressure. When a well is drilled into the aquifer, this pressure will cause water to naturally rise without the aid of a pump above the top of the aquifer (**piezometric level**). If groundwater naturally rises above the land surface through the well, it is called a **flowing artesian well**.

Do all wells in the area encounter flowing artesian conditions?

Not all portions of the confined aquifers in the Westwold Valley are under sufficient pressure to induce flow to the surface. It is important to note when interpreting local drill records that flowing artesian conditions are not necessarily continuous throughout the year. Flowing artesian conditions are unlikely to be encountered in shallow wells drilled into the western portion of the aquifers that are connected to the surface (unconfined).

Flowing artesian wells in the Westwold Valley area

A review of the BC WELLS database indicates that 5 known wells in the Westwold Valley area reported flowing artesian conditions at the time of drilling, based on voluntarily reported information. Additional flowing wells may be present in the area, as submission of well records for most types of wells was not mandatory prior to 2016. Of the known artesian wells, flow rates range up to 2725 m³/day (500 US gallons per minute). The depths at which these wells have encountered the artesian aquifer range from 11.5 to 101 m (38 to 332 ft) below ground surface.

Depths to artesian aquifer range from 11 m (36 ft) to 101 m (332 ft).

Preparing for drilling in the Westwold Valley area

Qualifications and experience

In BC, anyone constructing a well over 4.5 m (15 ft) deep must be registered as a qualified well driller or be working under the supervision of a qualified well driller or professional engineer or geoscientist. If artesian conditions are encountered and the well has the likelihood to flow, a qualified well driller or professional must be engaged to stop or control the flow regardless of the depth or type of the well. These drillers and professionals must be qualified, but also have the experience and equipment required for dealing with flowing artesian conditions.

Water well drillers in BC should be qualified & experienced.

Unregistered drillers may also undertake that activity if supervised by another registered well driller, or a professional, who has competency in stopping or controlling artesian flow and can be engaged should artesian conditions be encountered.

Details about the qualifications to become a qualified well driller (QWD) are set out in Part 2 of the Ground Water Protection Regulation at: http://www.bclaws.ca/civix/document/id/complete/statreg/39_2016

Looking to have a well drilled or well pump installed? Use the new *Register of Well Drillers and Well Pump Installers* search page to find a registered well driller or well pump installer in your area:

<https://apps.nrs.gov.bc.ca/gwells/registries/>

Controlling artesian flow means that the entire flow:

- Must be conveyed through the well's production casing;
- Can be stopped indefinitely without leakage outside of the production casing;
- Must not pose a threat to property, public safety or the environment.

Flow is not considered controlled if:

- Water is surfacing outside the well casing or in another location nearby;
- The flow cannot be stopped (e.g., with a valve shut-off or packer assembly);
- There is subsurface erosion (i.e., evident if flowing water is muddy or murky).

Assuming artesian flow

It is important to understand that geologic conditions are highly variable and information may not be available near the proposed drilling locations; therefore, neither the presence nor absence of flowing artesian conditions can be known with certainty prior to drilling. Therefore, when drilling into the confined aquifer in the Westwold Valley area it should always be assumed that flowing artesian conditions will be present and a precautionary approach (e.g. installing and sealing a surface casing of sufficient length) should be taken. The well driller and home owner must be prepared for the resulting costs, planning time, materials, expertise and equipment needed to construct the well to control or stop any artesian flow.

To manage the uncertainty, well drillers should always conduct a pre-drilling assessment; this could include:

- Assessing the physical setting of the proposed well (e.g., in a valley or area where nearby water is at a higher elevation),
- Consulting with local groundwater professionals, experienced well drillers, or residents to learn of other flowing wells or springs in the area,
- Examining well records from the BC GWELLS database and the Flowing Artesian Wells layer in iMapBC (<https://apps.nrs.gov.bc.ca/gwells/>)
- Reviewing professional hydrogeological reports in the Ecological Reports Catalogue (EcoCat) that may identify artesian aquifers (<http://www.env.gov.bc.ca/ecocat>)

Preparing and budgeting

Although preparing and constructing a well for flowing artesian conditions costs more than routine well construction, it is substantially less than the ensuing costs to repair damages or to decommission an uncontrolled well. In BC, the cost to decommission a high pressure, high flow well that was not constructed to handle artesian conditions can easily reach hundreds of thousands of dollars and possibly millions of dollars. In contrast, installing a surface casing of sufficient length to control flowing artesian conditions before drilling into the aquifer costs significantly less.

It is the responsibility of the well driller to advise the home owner of potential hazards associated with uncontrolled artesian flow (e.g., potential for erosion, flooding, subsidence) and the associated costs. The home owner and well driller should always have an agreement in place ahead of time to minimize any misunderstandings in the event that flowing artesian conditions are encountered.

Considerations for Home Owners

- Ensure the driller or professional you hire is registered with the Province, qualified & experienced with flowing artesian conditions.
- Have an agreement in place with the driller to deal with flowing artesian conditions.
- Recognize the real risks and your liability to neighbours & others if uncontrolled flows cause damage.

Considerations for Well Drillers

- Ensure you have experience & equipment to deal with flowing artesian conditions.
- Always assume flowing artesian conditions will be encountered in the Lower Salmon River Valley Confined aquifer (No. 89).
- Inform home owners of potential risks & associated costs of flowing artesian wells.

**Assume flowing
artesian
conditions will
be encountered.**

Constructing a well for flowing conditions

Assessing the geological and hydrogeological environment will help determine the best construction process for wells that may encounter flowing artesian conditions:

- For bedrock aquifers, the bottom of the casing should be sealed securely into the bedrock to ensure the flowing water can not rise up through the annular space of the well.
- For sand and gravel aquifers, a permanent outer casing should be grouted into the lowest confining layer before the inner production casing is drilled into the aquifer. A seal should be installed between the two casings to ensure flowing water can not rise up between the casings.

Drilling methods such as digging, boring, driving, augering and jetting are not typically sufficient where flowing conditions may be encountered; cable tool, air rotary, or mud rotary methods have been used more successfully. Plastic casings are not recommended for use in flowing artesian conditions.

For additional information on assessing, controlling or decommissioning a flowing artesian well refer to the:

- Province of BC's brochure on Flowing Artesian Wells:
www.env.gov.bc.ca/wsd/plan_protect_sustain/groundwater/flowing_artesian_wells.pdf
- Government of Ontario's Water Supply Wells – Requirements and Best Management Practices Handbook (Chapter 12): www.ontario.ca/document/water-supply-wells-requirements-and-best-practices
- Michigan Department of Environmental Quality's Flowing Well Handbook:
www.michigan.gov/documents/deq/deq-wb-dwehs-wcu-flowwellhandbook_221323_7.pdf

Legislation and regulatory information

To learn more about the applicable regulations, please see:

Water Sustainability Act, Sections 52 and 53: <http://www.bclaws.ca/civix/document/id/complete/statreg/14015>

Groundwater Protection Regulation: http://www.bclaws.ca/civix/document/id/complete/statreg/39_2016

Contact

The Province of BC's Regional Hydrogeologists in the Southern Interior:

Kamloops	250-371-6206
Penticton	250-490-2285
Vernon	250-260-4641

Ministry of Forests, Lands, Natural Resource Operations and Rural Development
Ministry of Environment
January 2018